

How to Use GPS Receiver

Step 1 – Press **Red Button** to turn on GPS Receiver.

Step 2 - Press **Page** to see the 5 Feature Pages

Feature Pages

**MOB
GOTO**


Page

Menu


**On /Off
Button**

**Enter
Mark**

Rocker

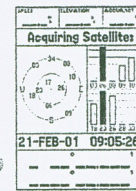


- 1 GPS Information Page Features:**
 - Speed, Elevation, Accuracy
 - Receiver Status
 - Satellite Location, Signal Strength
 - Date & Time
 - Current Location

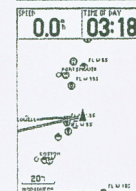


- 2 Map Page Features:**
 - Factory-loaded Marine Point Database
 - Zoom Scale
 - Selectable Data Fields
 - Measure Distance



- 3 Pointer Page Features:**
 - Compass Ring with Bearing Pointer
 - Selectable Data Fields

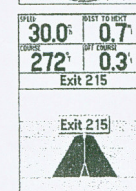

- 4 Highway Page Features:**
 - Navigation Highway
 - Selectable Data Fields
 - Navigation Messages

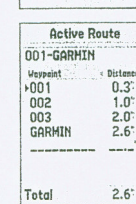

- 5 Active Route/Goto Page Features:**
 - Route/Goto Map Display
 - Waypoint Addition/Removal
 - Reversible Route Navigation
 - Route Planning
 - Route Information

Step 3- Press and Hold Enter. The Waypoint screen to the right will appear. If some one saved Waypoints the number at the top may be different.

Turn the page over

Mark Waypoint

Waypoint: **001**

Location: **15T 0347530**
5017167

Elevation: **1195'** Depth:



Show Name on Maps

Buttons: **Delete**, **Map**, **Goto**, **OK**


Adding UTM coordinates

- 4- **Press Rocker** key **UP** to highlight the UTM Coordinates.
Press **Enter (lightly)**

- 5- **Press Rocker** key to the **RIGHT** to change the last 3 digits of the first line.
Press Rocker key **UP or DOWN** to change the number. When the top line is correct press the **Rocker** key to the **Right**. *This will rap around to the lower row of values.* Move to the 3rd digit from the right and use the **Rocker** to change the other 3 values. Have your partner check the values to make sure they are correct. When they are correct press **ENTER lightly**.

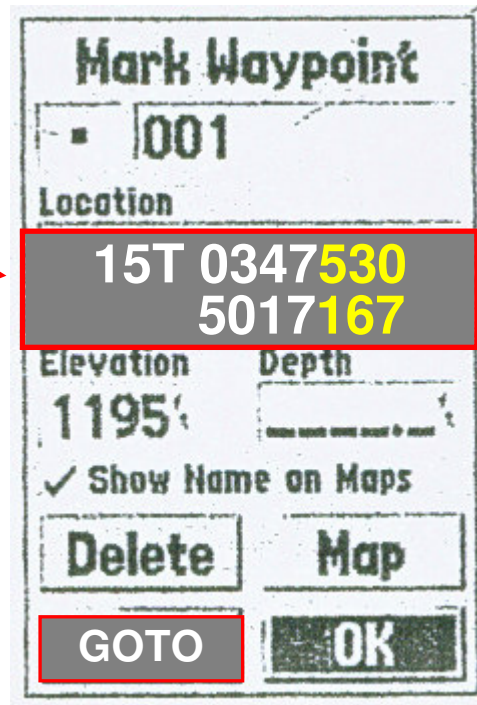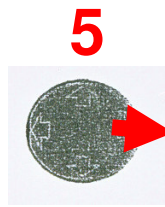


UTM Coordinates are highlighted, Press Enter lightly and the gray background will be removed

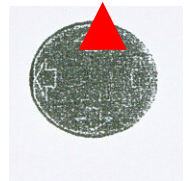

- 6- **Press Rocker** key **DOWN** and to the left to **GOTO**.
Press Enter. It returns to **GPS Page**.

- 7- **Press Page** 2 times to get to the **Pointer Page**

- 8- **The POINTER-COMPASS Page** shows distance & compass heading to GeoCache.
ARRIVING AT DESTINATION message will appear when you are at close to the GeoCache.

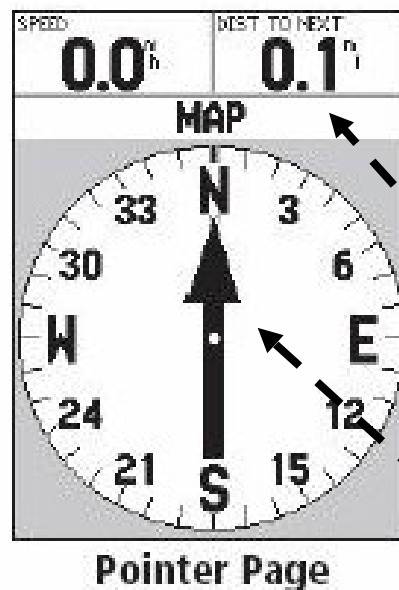

8
Distance to GeoCache
Compass heading to GeoCache